

## 色带芯的更换方法

### Exchange of Inked Ribbon

S010058色带芯

S010058 Ribbon Pack

S015290色带盒利用S010058色带芯最多可以更换使用5次，具体操作方法如下。

The inked ribbon of S015290 ribbon cartridge can be exchanged with S010058 ribbon pack five times.


Please exchange the inked ribbon according to the following instruction.

#### 1. 打开色带盒

如Fig.1所示箭头方向将色带盒上盖四周的勾爪部分向外按压，将色带盒上盖打开。

##### Opening the cartridge

Press the plastic pawls to the ribbon cartridge frame in the arrow direction shown in Fig.1. Then open the cartridge lid.

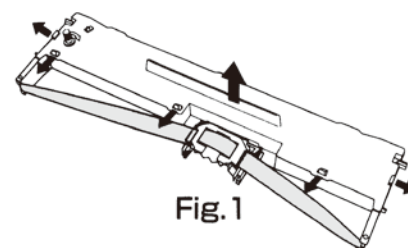


#### 2. 取出已使用完的色带

a. 如Fig.2所示箭头方向按压色带驱动轴直至抵住色带盒框。

b. 如Fig.3所示箭头方向取出齿轮间的色带。

c. 取出弹簧片之间的色带。( Fig.4)

d. 将用过的色带全部取出。

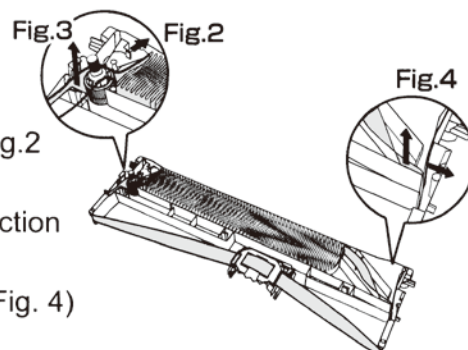

##### Removing the used Inked Ribbon

a. Push the ribbon drive roller in the direction of the arrow shown in Fig.2 until it leans on the cartridge frame.

b. Take out the used inked ribbon between the gears in the arrow direction shown in Fig.3.

c. Take out the used inked ribbon between the spring and cartridge. (Fig. 4)

d. Take out all the used inked ribbon from the cartridge.

#### 3. 安装新的色带

a. 从包装盒中取出新的色带芯。

b. 如Fig.5所示将色带芯包放入色带盒底座内。

c. 取下色带芯的导带卡，将其安装在色带盒上。

d. 将色带按其行走方向嵌入色带盒，至弹簧片部位时，


如Fig.6所示将色带按顺时针方向扭动半圈。

e. 按照Fig.7所示松开驱动轴的勾抓，使其复位。

f. 按住色带芯包的上方，如Fig.8所示箭头方向将带芯包从底盒中取出。

g. 装上色带盒的上盖。

h. 顺时针方向转动色带驱动旋钮，确认色带芯是否行走顺畅。

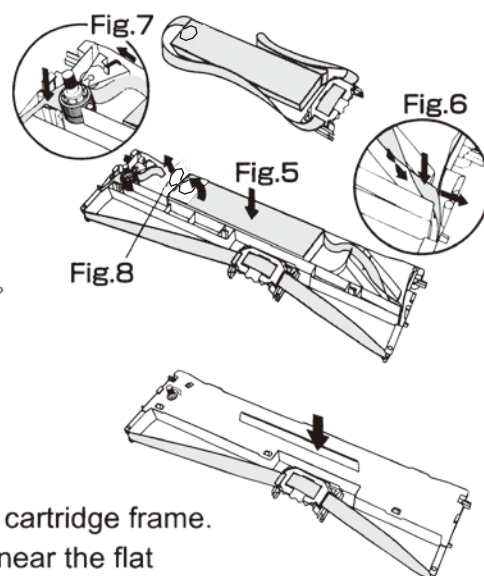

##### Installing the new ribbon

a. Take out the new ribbon pack from the individual box.

b. Place the ribbon pack in the cartridge frame as shown in Fig. 5.

c. Remove the ribbon guide from the ribbon pack and set it over the cartridge frame.

d. Feed the ribbon through the cartridge. While installing the ribbon near the flat spring, twist the ribbon clockwise for half circle first, as shown in Fig. 6.

e. Release the drive roller to its original position as shown in Fig. 7.

f. Holding the top of the ribbon pack, pull out the package in the arrow direction shown in Fig.8.

g. Set the cartridge case lid in portion.

h. Turn the ribbon feed knob clockwise to make sure that the ribbon winds smoothly.